



Elsema Remote Programming Guide

Programming Elsema PentaFOB® Remotes and Receivers

There are two ways to pair PentaFOB® remotes:

1. Programming from Remote to Receiver
2. Programming from Remote to Remote

Remote to Receiver:

1. Ensure all switches on the receiver's 12-way DIP switch are set to "OFF".
2. Hold down the program button on the receiver.
3. Press and hold a button on the remote for 2 seconds until the receiver LED blinks and turns green.
4. Release both the receiver and remote buttons.
5. Test by pressing the remote button to activate the receiver.

Remote to Remote (ensure you're near the receiver):

1. Open a working remote and briefly press the program button on the back of its board to enter learning mode.
2. Press the same button on the working remote to activate the receiver.
3. Press and hold a button on the new remote for 2 seconds.
4. Press the program button again on the working remote to exit learning mode.
5. Test the new remote to confirm it works with the receiver.

Erasing All Remotes from Receiver Memory:

Short the Code Reset pins on the receiver for 10 seconds to clear all stored remotes.

Using the PentaFOB® Programmer:

This tool helps add or delete specific remotes from memory, ideal for lost remotes or former tenants.

PentaFOB® Backup Chips:

Backup chips let you save or restore receiver memory, useful when many remotes are programmed and a backup is required in case of damage.