



How to Program a BFT Remote Control



How to Program a BFT Remote Control

6. When "Hidden Button" appears, press the hidden button on the new remote (or press buttons 1 and 2 together).
7. When "Desired Button" appears, press the button you want to use to control the gate. The screen will show "OK" and the count of programmed remotes.
8. To exit programming mode, press + and - together three times.

PLEASE NOTE - Some units supplied by specific vendors may use exclusive electronic programming. These receivers will only accept transmitters coded via special BFT software. If normal programming fails, contact a BFT supplier.